



Excalibur AL- 500

Remote Security System

Standard Features: The Excalibur AL-500 features light flash, siren and horn honk output, programmable auxiliary channels and Immobilizer Mode. This unit includes two stylish 4-button transmitters, a mini electronic 6-tone siren, a starter interrupt socket and relay, and an AU-84TM dual zone shock sensor.

Two Transmitters Included: Black 4-Button transmitters, with stainless steel trim, with Lock, Unlock, 2nd & 3rd channel small lower buttons.

Transmitter Operations:

Lock Button - Press and release to arm/lock. Press and hold to activate panic.

Unlock Button - Press and release to disarm/unlock.

Small “..” Button- Press and hold to activate 2nd channel.

Small “...” Button- Press and hold to activate 3rd channel.

How to Code the Transmitters: Turn “on” the ignition, then press the valet switch 5 times and wait for siren to chirp confirmation of entry into programming mode. Press and release any button on each remote to be coded (one at a time). The system will respond to each with an audible confirmation.



Omega part #
#448-03

Note: The Excalibur AL-500CF model has two *Carbon Fiber* finish transmitters, Omega part # **#448-03CF**

Programmable Features

Feature #	Default	Lock	Unlock
Feature #1 Auto Rearm	ON	ON	OFF
Feature #2 Last Door Arming	ON	ON	OFF
Feature #3 Doors Lock With Last Door Arming	ON	ON	OFF
Feature #4 Double Pulse Unlock	1 Pulse	2 Pulses	1 Pulse
Feature #5 Immobilizer Mode	OFF	ON	OFF
Feature #6 Siren & Horn or Horn	Siren & Horn	Siren & Horn	Horn
Feature #7 Shock Sensor False Alarm Bypass	OFF	ON	OFF
Feature #8 Dome Light Delay Bypass	OFF	ON	OFF
Feature #9 Ignition Activated Anti Car-Jacking	OFF	ON	OFF
Feature #10 Remote & Door Activated Anti Car-Jacking	OFF	ON	OFF
Feature #11 Dome Light or Window Roll Up	Dome Light	Dome Light	Window Roll Up
Feature #12 3rd Channel Output	Momentary	Momentary	Window Roll Up
Feature #13 Ignition Controlled Lock & Unlock	ON	ON	OFF

Feature controlled by Jumper on side of alarm brain:

Lock Pulse Time

Jumper In = .8 Second

Jumper Out = 4 Seconds

How to Program the Features:

Turn off the ignition.

Press the valet switch 5 times, wait for audible response, and then select the feature by pressing the valet button a number of times equal to the feature number. The siren will chirp once to indicate entry to Features Programming Mode.

Press the **Lock** (1 chirp) or **Unlock** (2 chirps) transmitter button to configure the feature as desired.

Repeat pressing the valet switch to access the next feature, and then again press the **Lock** or **Unlock** button to configure the feature.

