# Freedom-550

***Remote Security System***

**Standard Features:** The Freedom-550 features light flash, siren and horn honk output, programmable auxiliary channels and Immobilizer Mode. This unit includes two stylish 4-button transmitters, the amazing mini Psycho Siren, a starter interrupt socket and relay, and an AU-84TM dual zone shock sensor.

**Two Transmitters Included:** Black 4-Button transmitters, with stainless steel trim, with Lock, Unlock, 2nd & 3rd channel small lower buttons.

Omega part #
**#448-09**

**Transmitter Operations:**
**Lock Button** - Press and release to arm/lock. Press and hold to activate panic.
**Unlock Button** -Press and release to disarm/unlock.
**Small ".." Button**- Press and hold to activate 2nd channel.
**Small "..." Button**- Press and hold to activate 3rd channel.

**How to Code the Transmitters:** Turn "on" the ignition, then press the valet switch 5 times and wait for siren to wolf confirmation of entry into programming mode. Press and release any button on each remote to be coded (one at a time). The system will respond to each with an audible confirmation.

## Programmable Features

| Feature # | Default | Lock | Unlock |
|---|---|---|---|
| Feature #1 Auto Rearm | ON | ON | OFF |
| Feature #2 Last Door Arming | ON | ON | OFF |
| Feature #3 Doors Lock With Last Door Arming | ON | ON | OFF |
| Feature #4 Double Pulse Unlock | 1 Pulse | 2 Pulses | 1 Pulse |
| Feature #5 Immobilizer Mode | OFF | ON | OFF |
| Feature #6 Siren & Horn or Horn | Siren & Horn | Siren & Horn | Horn |
| Feature #7 Shock Sensor False Alarm Bypass | OFF | ON | OFF |
| Feature #8 Dome Light Delay Bypass | OFF | ON | OFF |
| Feature #9 Ignition Activated Anti Car-Jacking | OFF | ON | OFF |
| Feature #10 Remote & Door Activated Anti Car-Jacking | OFF | ON | OFF |
| Feature #11 Dome Light or Window Roll Up | Dome Light | Dome Light | Window Roll Up |
| Feature #12 3rd Channel Output | Momentary | Momentary | Window Roll Up |
| Feature #13 Ignition Controlled Lock & Unlock | ON | ON | OFF |

Feature controlled by Jumper on side of alarm brain:

| | | |
|---|---|---|
| Lock Pulse Time | Jumper In = .8 Second | Jumper Out = 4 Seconds |

*Specifications subject to change 01/07*

## How to Program the Features:

Turn off the ignition.

Press the valet switch 5 times, wait for audible response, and then select the feature by pressing the valet button a number of times equal to the feature number.  The siren will wolf once to indicate entry to Features Programming Mode.

Press the **Lock** (1 chirp) or **Unlock** (2 chirps) transmitter button to configure the feature as desired.

Repeat pressing the valet switch to access the next feature, and then again press the **Lock** or **Unlock** button to configure the feature.

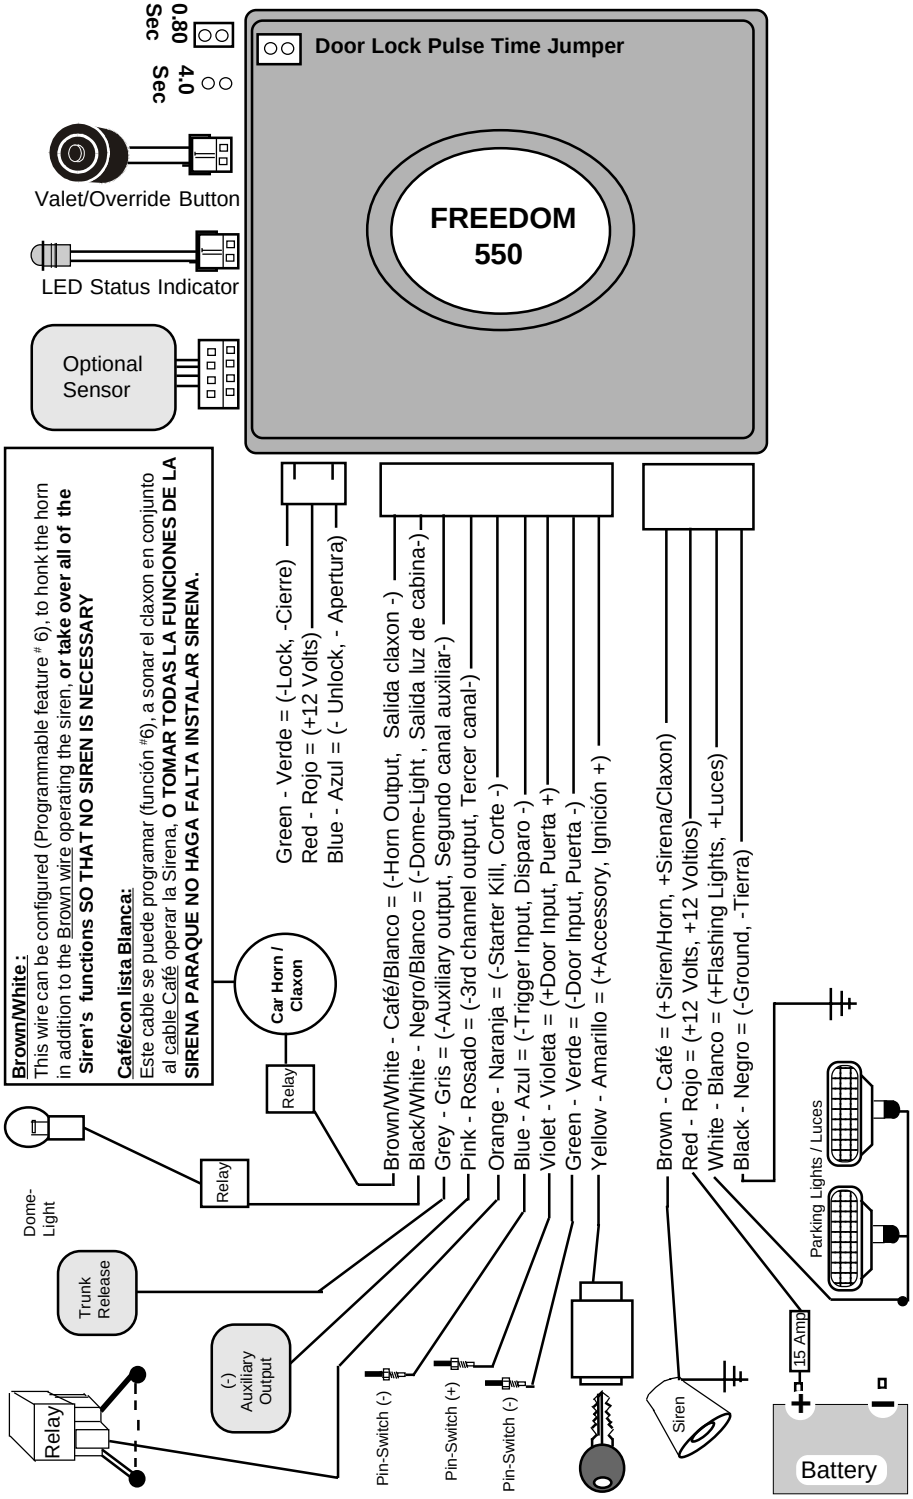


*Specifications subject to change  01/07*